

INSTALLATION & MAINTENANCE GUIDE

AMP[®] Lighting

AMP[®] Low Voltage Landscape Lighting

AMP AccentPro LED Spotlight

AAL-2000 Series

Help Hotline:

1-813-978-3900 • Mon-Fri 8am-8pm • Sat-Sun 10am-6pm (EST)

www.amplighting.com

 **Important: Please Read Before Installation**

This luminaire is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty.

These instructions do not intend to cover all variations in installation, operation maintenance or mounting situation.

1. Make sure that the power is turned OFF before installing or servicing this luminaire.
2. **WARNING:** risk of electrical shock. Install all luminaires 10 feet (3.05M) or more from pool, spa or fountain.
3. This luminaire is intended to be used only with a power supply (transformer) rated maximum of 300 watts (25 AMPS) at 15 volts.
4. Wiring connections must be made with wire connectors that is suitable for outdoor use.
5. Position the low voltage wire and wire connector so that it is located within 6 inches (15.2 cm) from a building structure, a luminaire or fitting.
6. The main low voltage cable is intended for shallow burial - less than 6 inches (152 mm)

 **Important: Safety Instructions**

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS
Lighted lamp is HOT!

WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS.

1. Turn off/unplug and allow to cool before replacing lamp.
2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
3. Do not touch the hot lens, guard or enclosure.
4. Keep lamp away from materials that may burn.
5. Do not touch lamp at any time. Use a soft cloth. Oil from skin may damage lamp.
6. Do not operate the luminaire fitting with a missing or damage shield.

SAVE THESE INSTRUCTIONS


Package Contents

- A. (1) Fixture
- B. (1) Stake


Parts Required (Sold separately)

- A. (1) MR16 LED Lamp

Product Dimensions

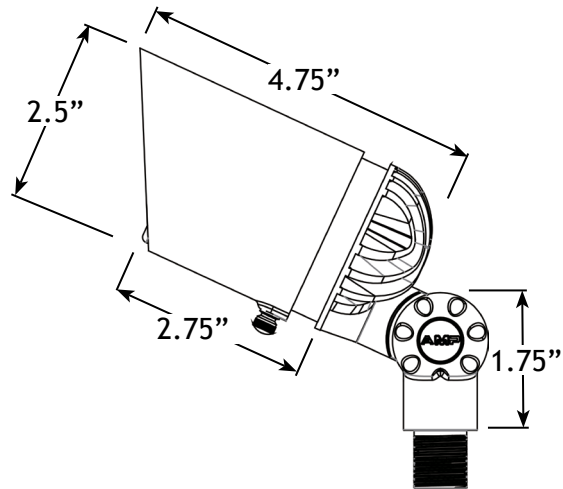

1 Remove Glare Guard and Shield

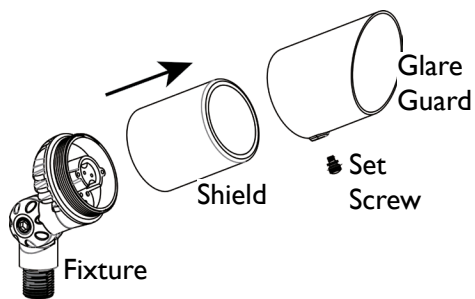


Loosen set screw and remove glare guard from shield. Unscrew shield and remove it from fixture.

INSTALLATION & MAINTENANCE GUIDE

AMP[®] AMP AccentPro LED Spotlight
AAL-2000-25-BBZ

2 Install MR16 LED Lamp

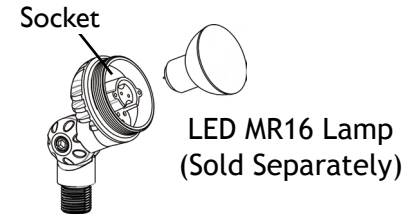


Insert lamp with correct wattage and type as marked on fixture label.

CAUTION: Do not exceed maximum wattage marked on luminaire label.

NOTE: DO NOT touch lamp with bare hands. Use soft cloth to handle lamp.


3 Install Shield and Glare Guard

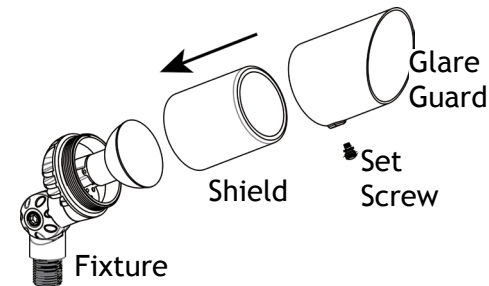

Screw the shield back onto the fixture. Pass the glare guard over the shield and secure with the set screw. Tighten until snug.

NOTE: DO NOT touch lamp with bare hands. Use soft cloth to handle lamp.


4 Install Stake

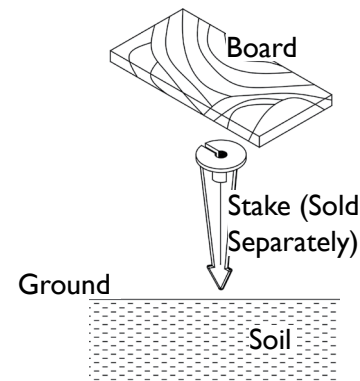

Determine the desired location for mounting the fixture. Hammer the stake into ground until the flange of the stake is flush to grade. To avoid damage to stake, place a board on top of stake while hammering.


NOTE: If ground is hard and stake is difficult to install, make a crosscut in ground using a flat shovel.

5 Install Fixture to Stake

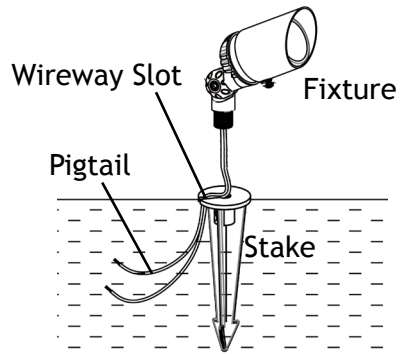

Clear away area in ground at wireway slot in top of stake. Lay luminaire pigtail into wireway slot and screw fixture into stake. Tighten until snug.

6 Wire Connection

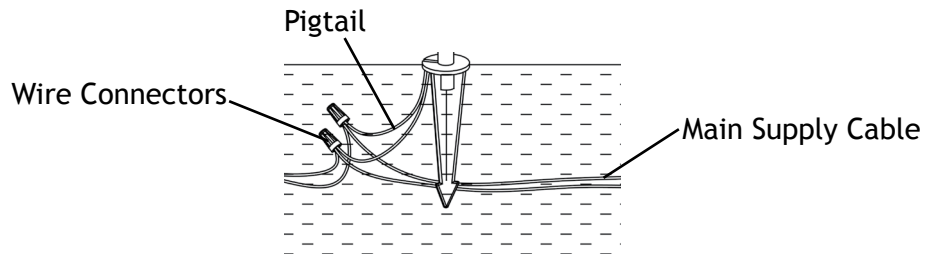

Strip both leads from luminaire pigtail. Using two wire connectors (Sold Separately), connect leads from luminaire to main supply cable leads.

Install/Replace MR16 LED Lamp

Remove the glare guard and the shield to expose the lamp and replace it with correct wattage and type marked on fixture label. And then reinstall the shield and glare guard to the fixture.

IMPORTANT: Halogen lamps must be protected from moisture and dust at all times. Always re-install shield when moved.

AMP[®] Lighting

Help Hotline:

1-813-978-3900 • Mon-Fri 8am-8pm • Sat-Sun 10am-6pm (EST)

Specifications and product details subject to change without notice.
© Copyright 2014, AMP[®] Lighting, Lutz FL USA 33549 • All rights reserved.
customersupport@AMPlighting.com • 813.978.3900

www.amplighting.com

is-AAL-2000-25-BBZ.pdf