The SV Reel series are covered by a one-year warranty against defects in materials or workmanship. In order to invoke this warranty, the original owner must send the entire Redington product, including the reel and parts, freight paid and insured to the Bainbridge Island address listed on the instruction sheet.

Please include a note explaining the problem along with the appropriate return address and phone number. For all shipments within the U.S., original owner will be responsible for \$20 fee to cover return shipping, insurance and processing. International customers will be asked to pay the actual shipping and insurance charges. Redington reserves the right to determine whether to repair or replace any Redington product covered by this warranty. For contact information please see our website for details or email warranty@redington.com

= Switching the reel from Left To Right Hand Retrieve =

- 1) Remove the spool from the frame.
- Remove part #18 (e-clip).
- 3) Remove and invert one way bearing part #17.
- 4) Replace part #18 (e-clip).

= Backing Capacity =

Model	Line	Backing Capacity
SV I	WF#4	75yds / 20lb Backing
SV II	WF#5	125yds / 20lb Backing
SV III	WF#8	200yds / 20lb Backing

SV SERIES

REDINGTON'

Redington 12715 Miller Road NE #101 Bainbridge Island, WA 98110

Phone # 800 - 253 - 2538 Fax # 206 - 780- 5465

web site : www. redington.com

= Maintenance of Redington SV reel =

Proper care and maintenance of this reel will ensure its performance.

1. Use a cloth or toothbrush with warm soapy

water to remove any sediments or dirt in hard

to reach places.

- 2. Rinse with Freshwater.
- 3. Dry all reel surfaces.
- 4. Lubricate the main shaft with grease.
- 5. Apply a thin layer of grease to all gear surfaces.
- 6. Apply a small amount of oil to one way
 - bearing located inside of spool.

= Warranty =

S				(0			
NO		NO	PART NAME	NO	PART NAME		
1	SCREW(DRAG KNOB)	NO 10	CLICK PIN SPRING	N0 18	PART NAME E-CLIP	NO 25	PART NAME
1 2	SCREW(DRAG KNOB) DRAG KNOB	-	CLICK PIN SPRING FRAME				PART NAME SCREW(RETAINER COVER)
1 2 3	SCREW(DRAG KNOB) DRAG KNOB SPRING WASHER	10	CLICK PIN SPRING FRAME MAIN SHAFT	18	E-CLIP	25	PART NAME
1 2 3 5	SCREW(DRAG KNOB) DRAG KNOB SPRING WASHER DRAG PLATE	10 11	CLICK PIN SPRING FRAME	18 19	E-CLIP SPOOL	25 26	PART NAME SCREW(RETAINER COVER) SCREW(HANDLE RIVET) HANDLE RIVET
1 2 3 5 7	SCREW(DRAG KNOB) DRAG KNOB SPRING WASHER DRAG PLATE FOOT	10 11 12	CLICK PIN SPRING FRAME MAIN SHAFT	18 19 20	E-CLIP SPOOL SCREW(BALANCE)	25 26 27	PART NAME SCREW(RETAINER COVER) SCREW(HANDLE RIVET) HANDLE RIVET HANDLE KNOB
1 2 3 5	SCREW(DRAG KNOB) DRAG KNOB SPRING WASHER DRAG PLATE	10 11 12 14	CLICK PIN SPRING FRAME MAIN SHAFT DRAG "B" WASHER	18 19 20 21	E-CLIP SPOOL SCREW(BALANCE) BALANCE	25 26 27 28	PART NAME SCREW(RETAINER COVER) SCREW(HANDLE RIVET) HANDLE RIVET

Please send your reel into our warranty department should your reel need servicing. Parts are not available for purchase.

