



48"CAST ALUM. DINING TABLE

CO600148-BK



 




Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.







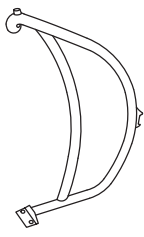


Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.







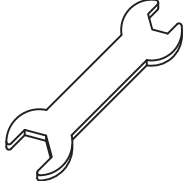

Care: Use a soft, clean cloth that will not scratch the surface when cleaning. The use of solvents is not necessary. Should you choose to use solvents, test in an inconspicuous area first to avoid damaging the finish. To clean, simply use a soft, clean cloth lightly dampened with water.

PARTS LIST

<p>A</p> 	<p>B</p> 	<p>C</p> 
<p>Top 1 PC</p>	<p>Leg 4 PCS</p>	<p>Stretcher 1 PC</p>

HARDWARE LIST


<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 	<p>5</p> 
<p>Cylinder Bolt (M8*25) 4 PCS</p>	<p>Spring Washer (M8) 4 PCS</p>	<p>Flat Washer (M8) 4 PCS</p>	<p>Nut (M8) 4 PCS</p>	<p>Nut Cap (M8) 4 PCS</p>
<p>6</p> 	<p>7</p> 	<p>8</p> 	<p>9</p> 	
<p>Bolt (M6*30) 8 PCS</p>	<p>Flat washer (M6) 8 PCS</p>	<p>Bolt cap (M6) 8 PCS</p>	<p>Wrench (M6) 1 PC</p>	

- | | | |
|----------------------|---|-----|
| ① Bolt (M8*25) |  | x 4 |
| ② Spring Washer (M8) |  | x 4 |
| ③ Flat Washer (M8) |  | x 4 |
| ④ Nut (M8) |  | x 4 |
| ⑤ Nut Cap (M8) |  | x 4 |
| ⑥ Bolt (M6*30) |  | x 8 |
| ⑦ Flat Washer (M6) |  | x 8 |
| ⑧ Bolt Cap (M6) |  | x 8 |

Step 1: Place Top (A)
upside down on a soft cloth.

Insert all Cylinder Bolts (Part #1) into
the pre-drilled holes of Top (A).

Step 2: Attach two adjacent Legs (B)
to Top (A) by inserting the Cylinder
Bolts (Part #1) through the holes in
the ends of the Legs (B). Now secure
the Legs (B) using Flat Washers
(Part #3), Spring Washers (Part #2)
& Nuts (Part #4).
Note - -Tighten Nuts only half way
using wrench (#9) .

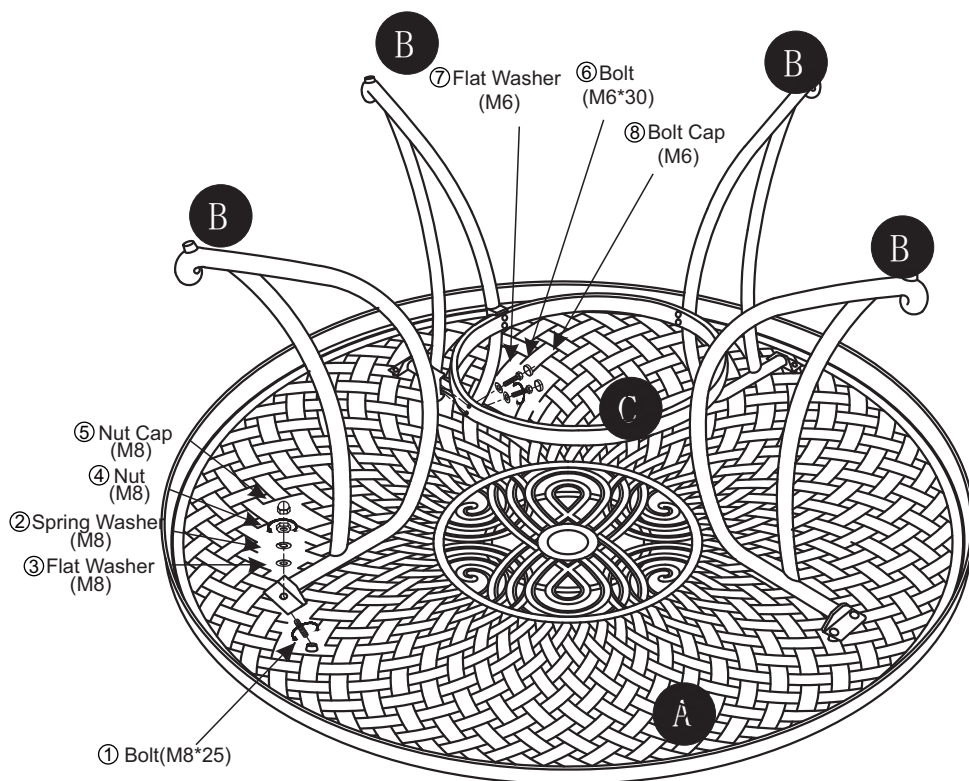

Step 3: Attach Stretcher (C) to
attached Legs (B) using Flat Washers
(Part #7), and Bolts (Part #6) as shown.
Note - Tighten Nuts only half way
with wrench (#9). Now attach the other two
Legs (B) to Top (A) & Stretcher (C)
using the same method as the first
two legs. Tighten all bolts completely
with wrench (#9).

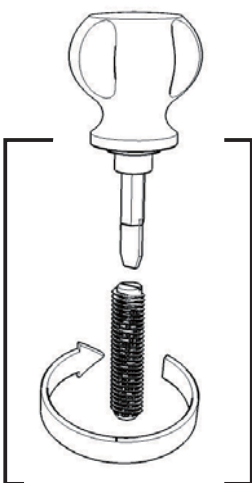


Figure 1

Flathead screw
driver(not included)

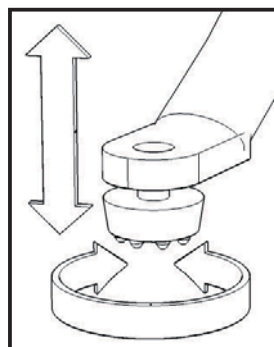


Figure 2

Step 4: Cover all Nuts and bolts with
Nut Caps (Part #5) & Bolt Caps (Part
#8). Turn the table over into the upright
position in your congratulations! You
are finished.



Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.