




CAST ALUM. LOVE SEAT

CO6104-BK

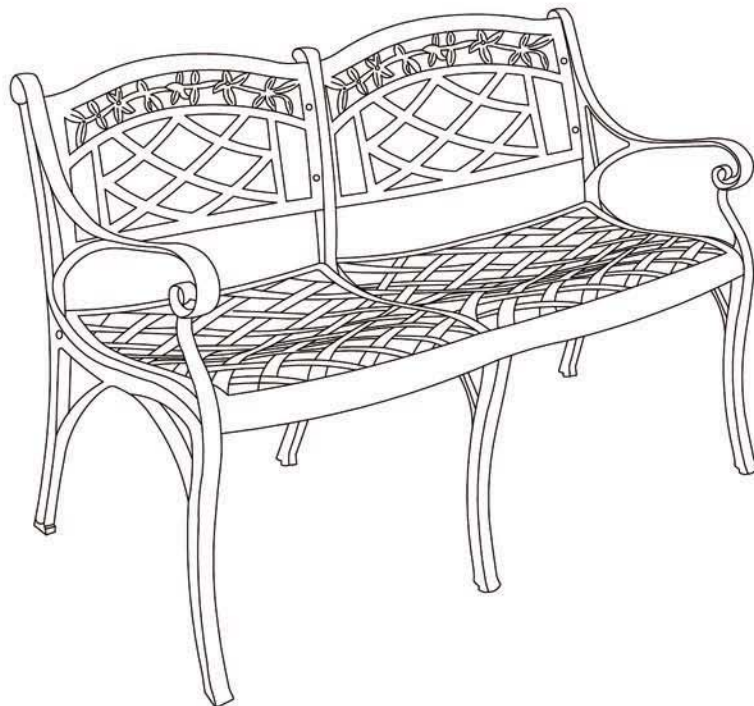


 

 



Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.







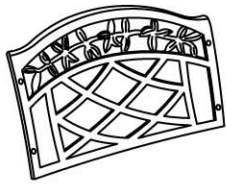





 
Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.

Care: Use a soft, clean cloth that will not scratch the surface when cleaning. The use of solvents is not necessary. Should you choose to use solvents, test in an inconspicuous area first to avoid damaging the finish. To clean, simply use a soft, clean cloth lightly dampened with water.


PARTS LIST

<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Back 2 PCS</p>	<p>Seat 2 PCS</p>	<p>Left Side Frame 1 PC</p>	<p>Middle Side Frame 1 PC</p>	<p>Right Side Frame 1 PC</p>


HARDWARE LIST
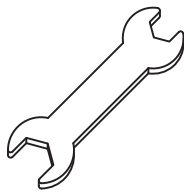
<p>1</p> 	<p>2</p> 	<p>3</p> 	<p>4</p> 	<p>5</p> 
<p>Phillips Heat Bolt (M6*30) 8 pcs</p>	<p>Spring Washer (M6) 8 pcs</p>	<p>Flat Washer (M6) 8 pcs</p>	<p>Nut (M6) 8 pcs</p>	<p>Nut Cap (M6) 8 pcs</p>
<p>6</p> 	<p>7</p> 	<p>8</p> 	<p>9</p> 	<p>10</p> 
<p>Short Bolt (M8*30) 4 pcs</p>	<p>Spring Washer (M8) 6 pcs</p>	<p>Flat Washer (M8) 12 pcs</p>	<p>Nut (M8) 6 pcs</p>	<p>Nut Cap (M8) 6 pcs</p>
<p>11</p> 	<p>12</p> 	<p>13</p> 		
<p>Wrench (M6 & M8) 1 pc</p>	<p>Long Bolt (M8*45) 2 pcs</p>	<p>Bolt Cap (M8) 4 pcs</p>		

Step 1: Attach Frames (C,D&E) to Seats (B) With Short Bolts (Part #6),Long Bolts(Part #12), Flat Washers(Part #8),Spring Washers(Part #7) & Nuts (Part #9).Note- Long Bolts (Part #12) will be used to attach the Middle Frame (D) & Short Bolts (Part #6) will be used to attach the Left & Right Side Frames (C & E).Cover M8X30 mm bolts (Part #6) with bolt caps (Part #13).Note - Do not fully tighten bolts at this time.

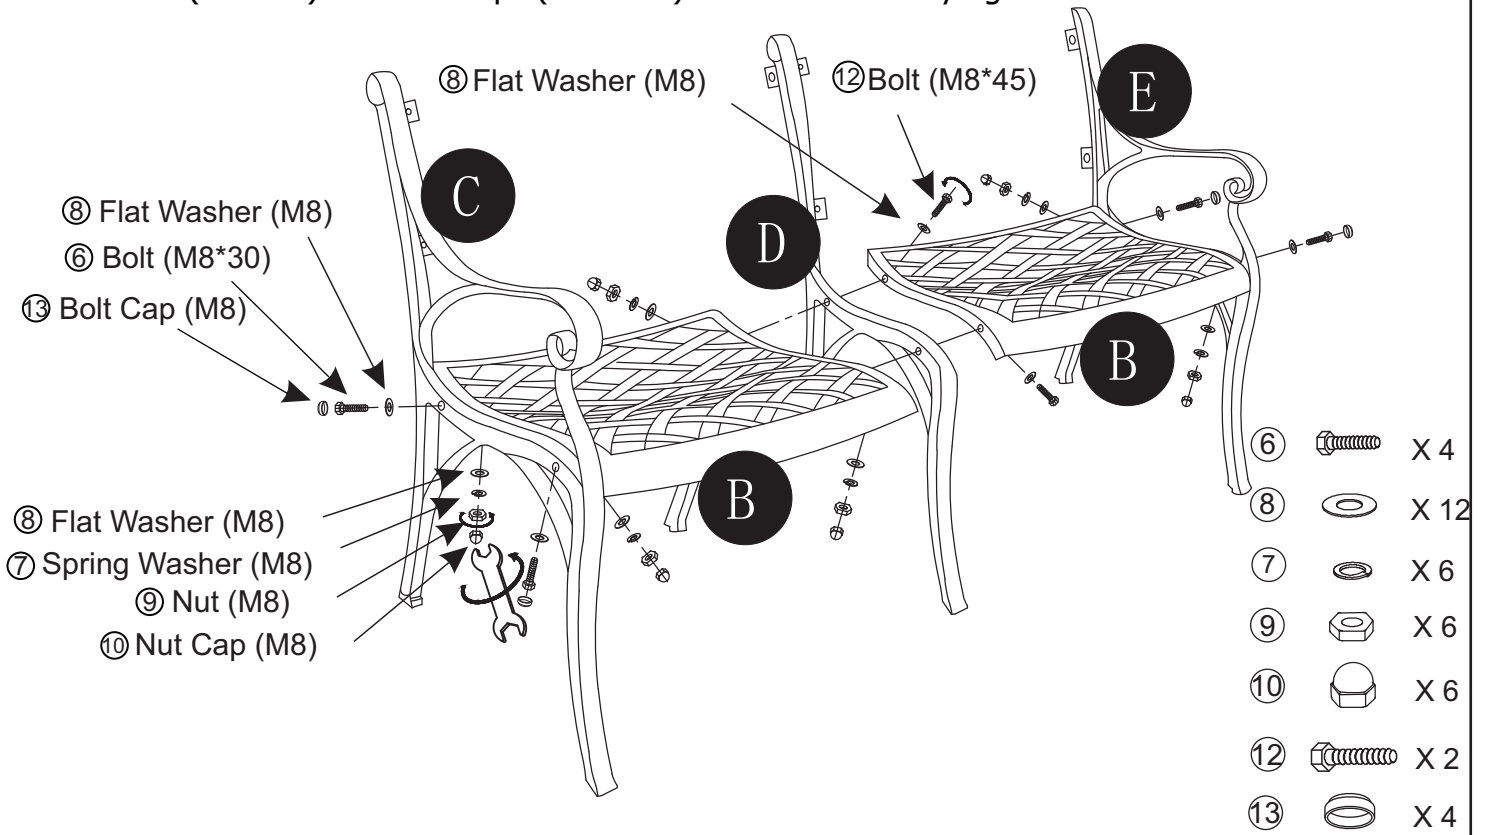

Step 2: Attach Back (A) to unit with Phillips Head Bolts (Part #1),Flat Washers (Part #3), Spring Washers (Part #2),and Nuts (Part #4).Tighten all bolts completely.Cover all Nuts (Part #'s 4) with Nut Caps (Part #'s 5).

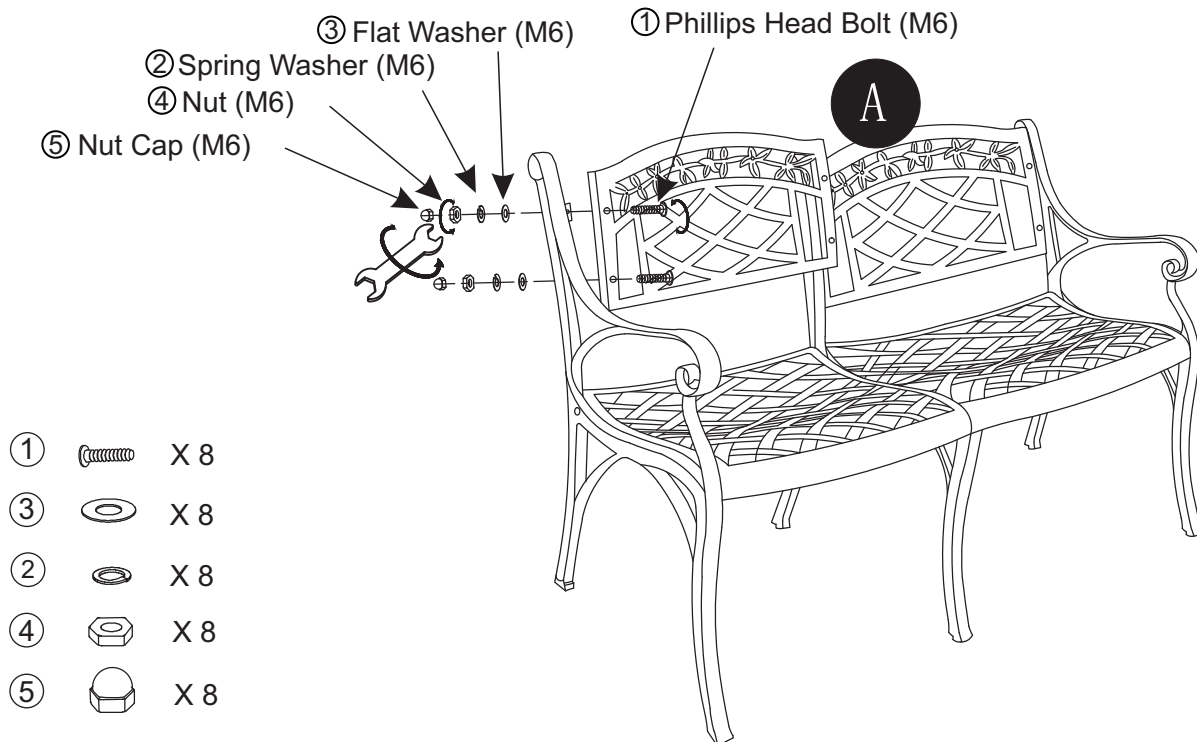



Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.