


C R O S L E Y

FURNITURE

METAL CHAIR

CO1001A

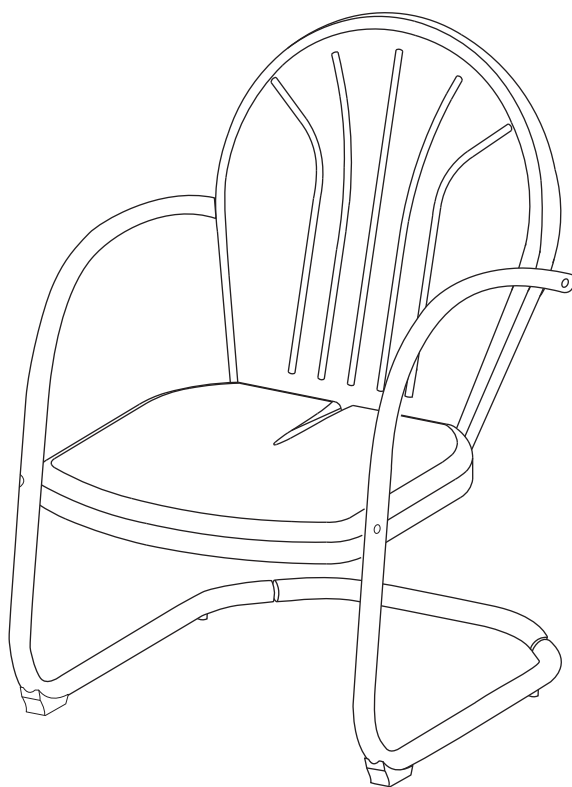

C R O S L E Y






FURNITURE

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.











Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.

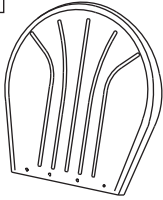Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

PART LIST

A		B		C		D		E	
	Chair Back		Chair Seat		Left leg		Right Leg		Leg Connector
	1PC		1PC		1PC		1PC		1PC

HARDWARE LIST

1		2		3		4		5	
	Short Allen Bolt 4 PCS		Long Allen Bolt 4 PCS		Ø6.5 X 1.0 MM WASHER 4 PCS		1/4" NUT 8 PCS		BOLT COVER 8 PCS
6		7		8		9		10	
	NUT COVER 8 PCS		HEX WRENCH 1 PC		ALLEN KEY 1 PC		FOOT CAP FACTORY ASSEMBLY 2 PCS		FOOT CAP FACTORY ASSEMBLY 2 PCS

Step 1: Place the chair seat (B) on a solid flat surface. Position the chair back (A) as shown in (Figure 1) so that the holes in the chair back align with the holes in the chair seat. Insert Short Allen Bolt (1) through the holes of the chair back (A) and then through the holes in the chair seat. Add a 1/4" nut (4) to the end of each bolt. Tighten using hex wrench (7) and Allen Key driver (8). Do not over tighten. Cover nuts and bolts with covers (5 & 6). Repeat for remaining three holes on each back(A).

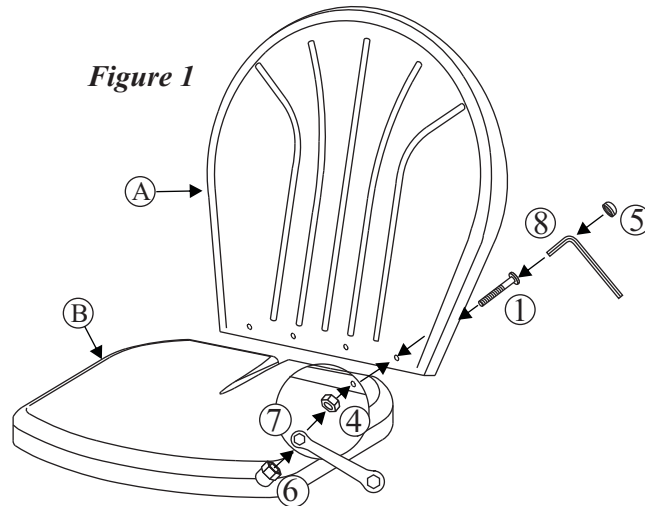


Figure 1

Step 2: Protective caps were used on the ends of Legs (C & D) for shipping. These will need to be removed for assembly and can be discarded.

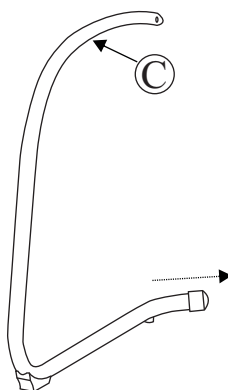


Figure 2

Step 3:The holes in the chair seat/chair back assembly must be perfectly aligned with the holes in the chair leg assembly. While one person holds the chair seat/chair back assembly as shown in *(Figure 3)*, have another person attach to the chair leg assembly. Add a E 6.5 x 1.0mm washer (3) to Long Allen Bolt (2) and insert through aligned holes in the rear arm and chair back.

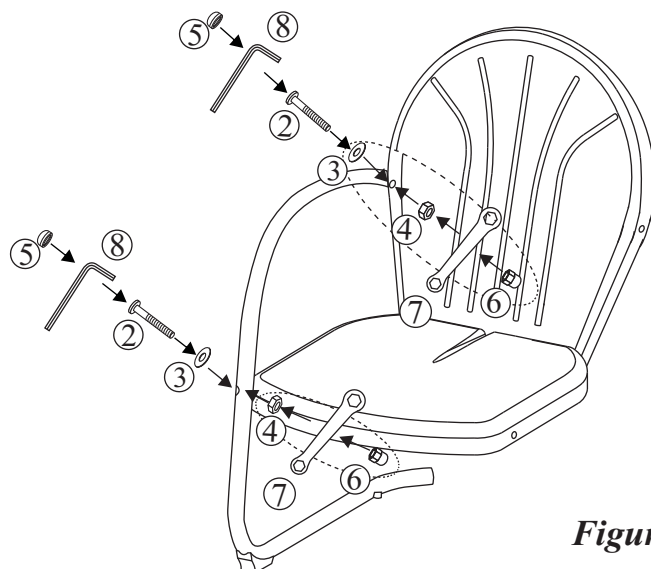


Figure 3

Step 4:Insert the end of Leg Connector (E) into Legs (C & D). Attach Leg (D) to Chair Back (A) using Long Allen Bolt (2), Washer (3), 1/4" Nut (4) & Nut Cover (6) as shown. Note - The chair is designed for the Leg Connector (E) to be held in place with tension. You will need to turn the chair on it's side and press Leg (D) down to meet Chair Seat (B). Turn the chair on it's side with Leg (C) on a flat non-abrasive surface. Press Leg (D) down to meet Chair Seat (B) and attach using the same method as in Step #3. Turn the chair upright on it's base & it is ready for use.

If the chair is not square or sitting properly, slightly loosen the bolts, square up the chair, and re-tighten.

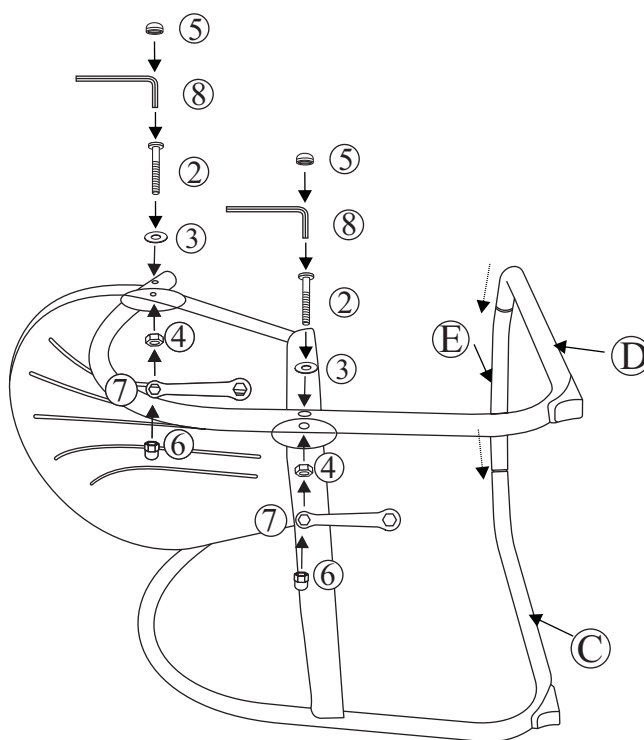


Figure 4

C R O S L E Y
FURNITURE

Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.


This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.

C R O S L E Y

FURNITURE

METAL STATIONARY LOVESEAT CO1002A

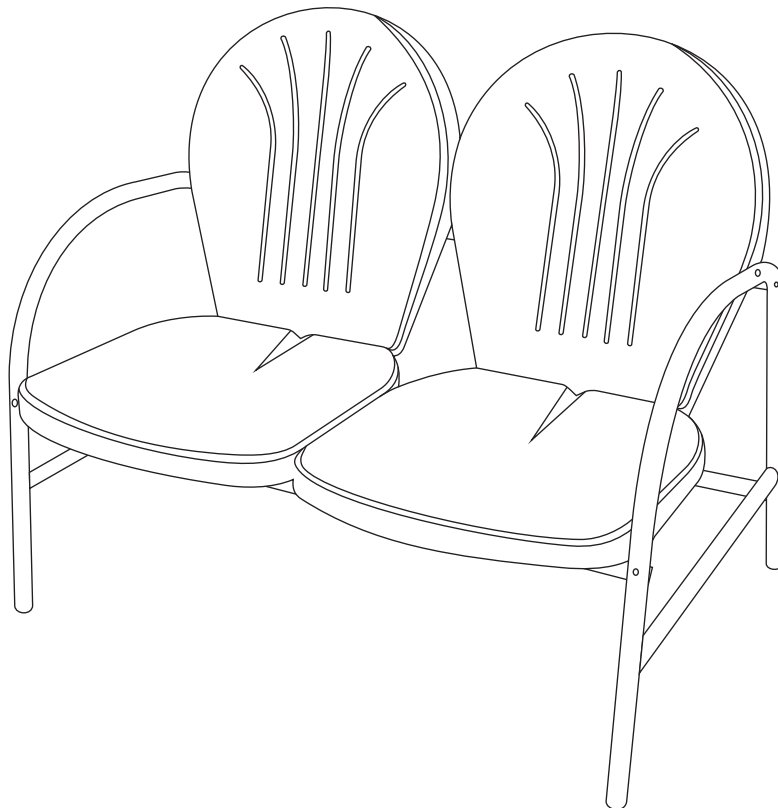

C R O S L E Y



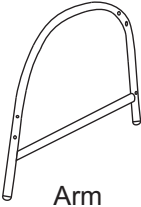



FURNITURE

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.














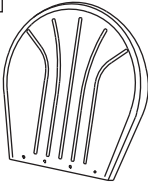Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.


PART LIST

A  Chair Back	B  Chair Seat	C  Arm	D  Upper Back Crossbar	E  Lower Back Crossbar
2PCS	2PCS	2PCS	1PC	1PC
F  Front Crossbar 1PC				

HARDWARE LIST

1  1/4" X 15 MM BOLT 8 PCS	2  1/4" X 25MM BOLT 1 PC	3  1/4" X 32MM BOLT 1 PC	4  1/4" X 40MM BOLT 4 PCS	5  1/4" X 42MM BOLT 6 PCS
6  Ø6.5 X 1.0 MM PLASTIC WASHER 20 PCS	7  1/4" NUT 16 PCS	8  BOLT COVER 20 PCS	9  NUT COVER 16 PCS	10  Ø6.5 X 6 MM PLASTIC WASHER 2 PCS
11  Ø6.5 X 11 MM PLASTIC WASHER 1 PC	12  HEX WRENCH 1 PC	13  ALLEN KEY 1 PC		

Step 1: Place the chair seat (B) on a solid flat surface. Position the chair back (A) as shown in *(Figure 1)* so that the holes in the chair back align with the holes in the chair seat. Insert 1/4"x15mm bolts (1) through the holes of the chair back (A) and then through the holes in the chair seat. Add a 1/4" nut (7) to the end of each bolt. Tighten using hex wrench (12) and Allen Key (13). Do not over tighten. Cover nuts and bolts with covers (8 & 9). Repeat for remaining three holes on each back(A).

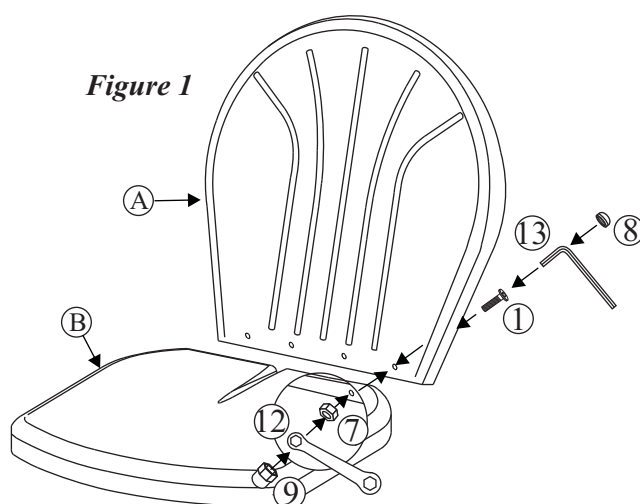

Step 2: Join the two backs (A) by attaching them to the Upper Back Crossbar (D) using two $\varnothing 6.5 \times 1.0$ washers (6), two $\varnothing 6.5 \times 6.0\text{mm}$ plastic washers (10), one 1/4"x 32mm bolt (3) and one 1/4"nut (7) as shown in *(Figure 2)*. Tighten with hex wrench (12) and Allen Key (13). Do not over tighten. Cover nuts and bolts with covers (8 & 9).

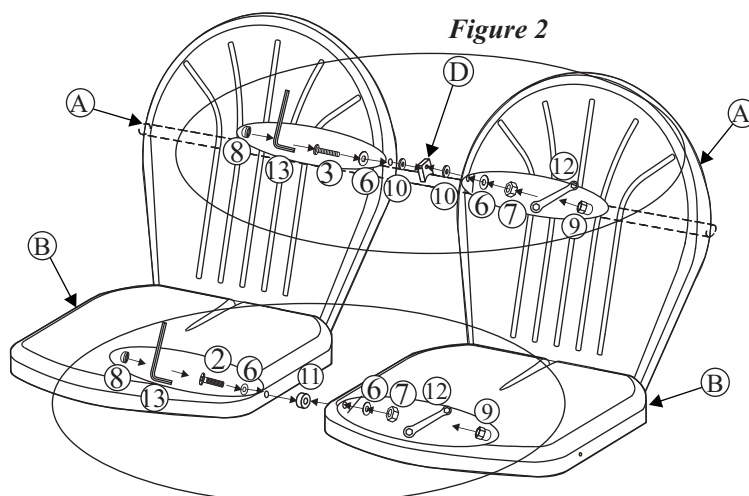


Figure 3

Step 4: Attach arm (C) to seat (B) and back (A) using 1/4"x42mm bolts (5), two Ø 6.5 x 1.0 washers (6), and 1/4" nuts (7) as shown in (Figure 4). Tighten with hex wrench (12) and Allen Key (13). Do not over tighten. Repeat for remaining Loveseat arm. Cover nuts and bolts with covers (8 & 9).

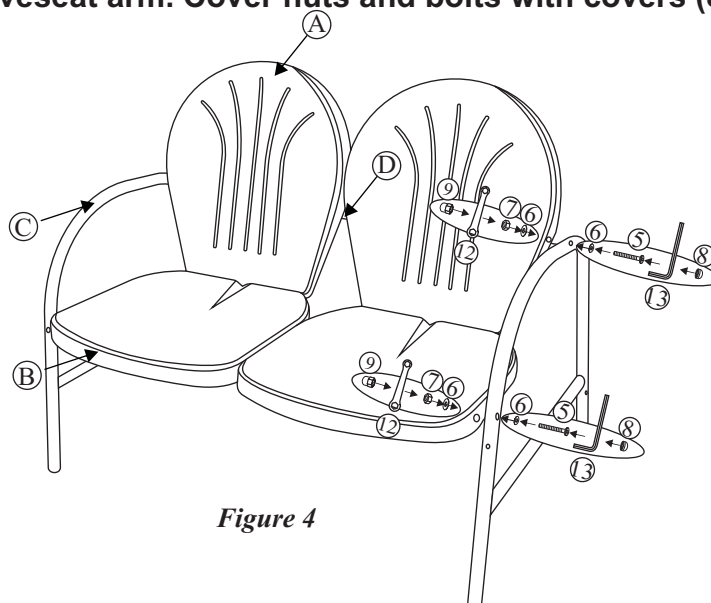


Figure 4

Step 5: Attach Upper Back Crossbar(D) and Lower Back Crossbar (E) to Arm rest (c) using 1/4"x40mm bolts (4), two Ø 6.5 x 1.0 washers (6) as (Figure 5). Tighten with Allen Key (13). Do not over tighten. Repeat for remaining Loveseat arm. Cover nuts and bolts with covers (8 & 9).

Step 6: Attach Front Crossbar(F) to Arm rest (C) using one 1/4"x42mm bolts (5), two Ø 6.5 x 1.0 washers (6) and one 1/4" nut (7) as (Figure 6). Tighten with hex wrench (12) and Allen Key (13). Do not over tighten. Repeat for remaining Loveseat arm. Cover nuts and bolts with covers (8 & 9).

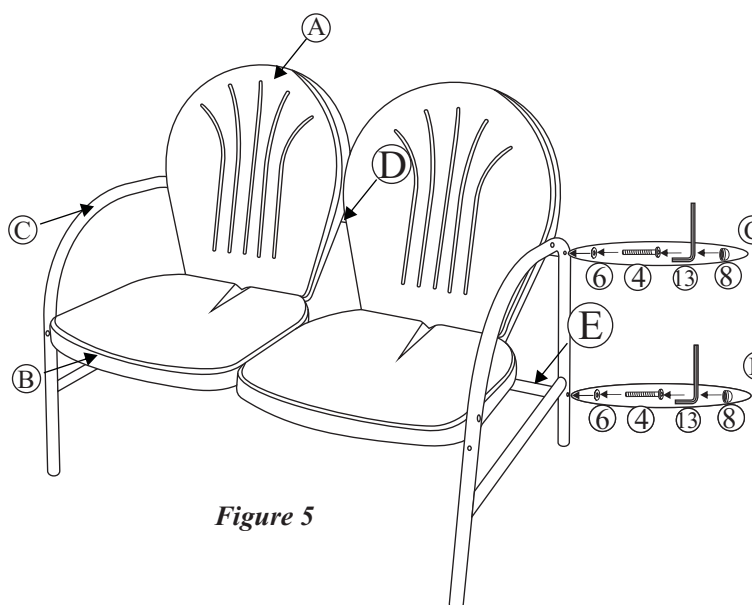


Figure 5

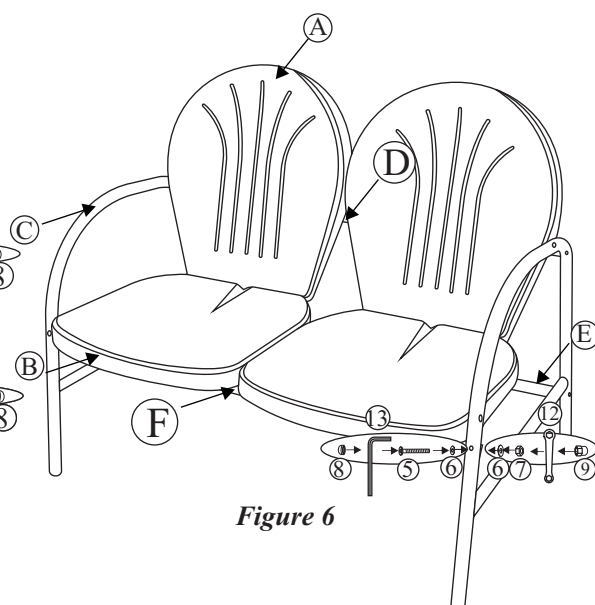


Figure 6

C R O S L E Y
FURNITURE

Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.


This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.

C R O S L E Y

FURNITURE

METAL SIDE TABLE CO1011A

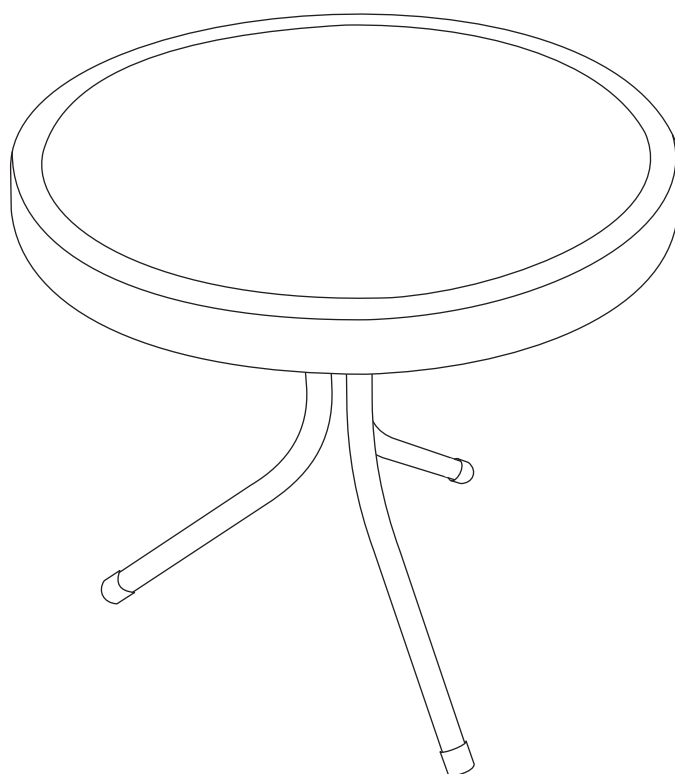

C R O S L E Y




FURNITURE

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strive to provide fine furniture products, built with quality materials. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.









Should you experience any missing or damaged parts, **do not return to the store.** Please contact us directly at 800-815-4796.

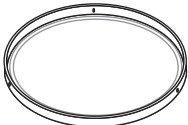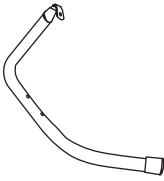Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

PART LIST


<div data-bbox="161 197 212 253">A</div>  <div data-bbox="256 443 316 472">TOP</div>	<div data-bbox="416 197 467 253">B</div>  <div data-bbox="528 443 587 472">LEG</div>	<div data-bbox="687 197 738 253">C</div>  <div data-bbox="727 443 922 472">Leg Connector</div>
1PC	3PC	1PC

HARDWARE LIST


<div data-bbox="165 772 217 828">1</div> 	<div data-bbox="421 772 472 828">2</div> 	<div data-bbox="692 772 743 828">3</div> 	<div data-bbox="962 772 1013 828">4</div> 	<div data-bbox="1232 772 1283 828">5</div> 
1/4" X 15 MM BOLT 3 PCS	Ø6.5 X 1.0 MM WASHER 3 PCS	BOLT COVER 3 PCS	1/4" NUT 3 PCS	ST4.2 X 33 MM BOLT 6 PCS
<div data-bbox="165 1160 217 1216">6</div> 	<div data-bbox="421 1160 472 1216">7</div> 	<div data-bbox="692 1160 743 1216">8</div> 		
Allen Wrench 1 PC	HEX WRENCH 1 PC	FOOT CAP FACTORY ASSEMBLY 3 PCS		

Tools needed: Allen key(part#6) and Hex Wrench(part#7) (Included) Phillips Head Screw Driver(Not included)

Step1: Place tabletop upside down on a flat, non-abrasive surface. Attach table leg to tabletop using 1/4"x 15mm bolt (1) and 1/4" (2) washer as shown in (Figure 1). Add 1/4" nut (4) to the end of bolt. Tighten a few revolutions only. Do not tighten completely at this time as some adjustments may be necessary to the alignment of the table legs. Repeat for remaining two legs.

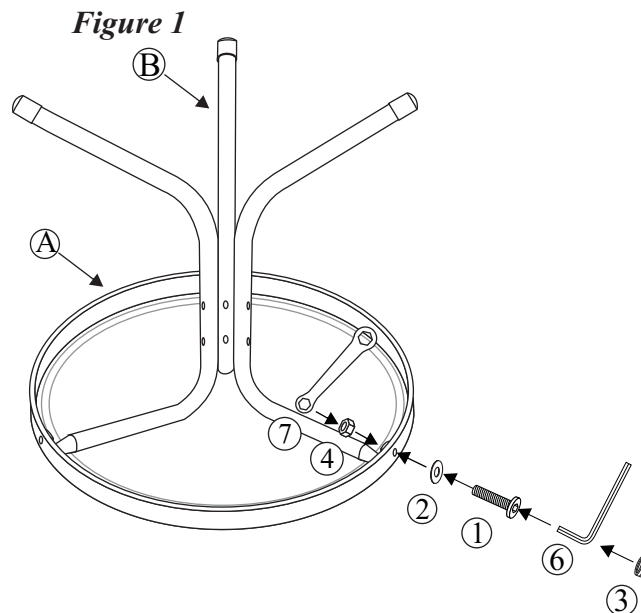


Step2: Insert table leg connector (C) in the center of the three legs as shown in Figure 2. Secure by inserting two ST4.2 x 33mm bolt (5) through the two holes in the center of the leg and into the leg connector as shown in (Figure 3). Tighten a few revolutions only. Do not tighten completely. Repeat for remaining two legs.

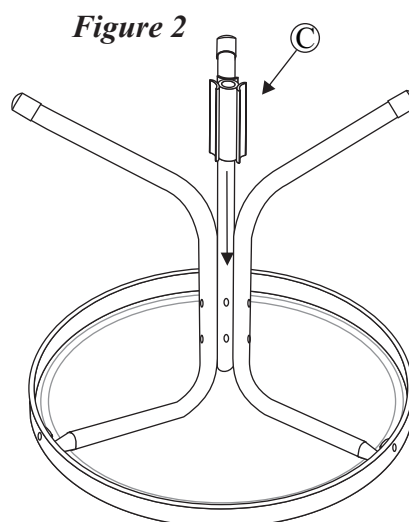

Step3: Make any adjustments to the parts to ensure they are properly aligned. At this time tighten all nuts and bolts using Allen Wrench (6) and hex wrench (7). Tighten each bolt connection a few revolutions at a time, rotating between bolt connections until all nuts and bolts are completely tightened. DO NOT OVER TIGHTEN. Cover bolts with PVC bolt covers. Turn table into the upright position.

YOUR TABLE IS NOW READY FOR USE.

Figure 3

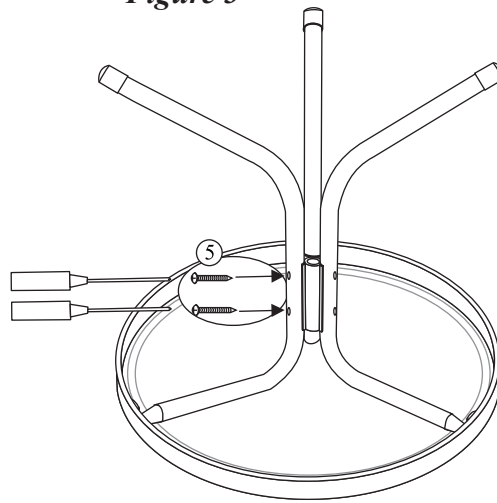

C R O S L E Y
FURNITURE

Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.


Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.

C R O S L E Y
F U R N I T U R E

Metal Patio Table
CO1012A

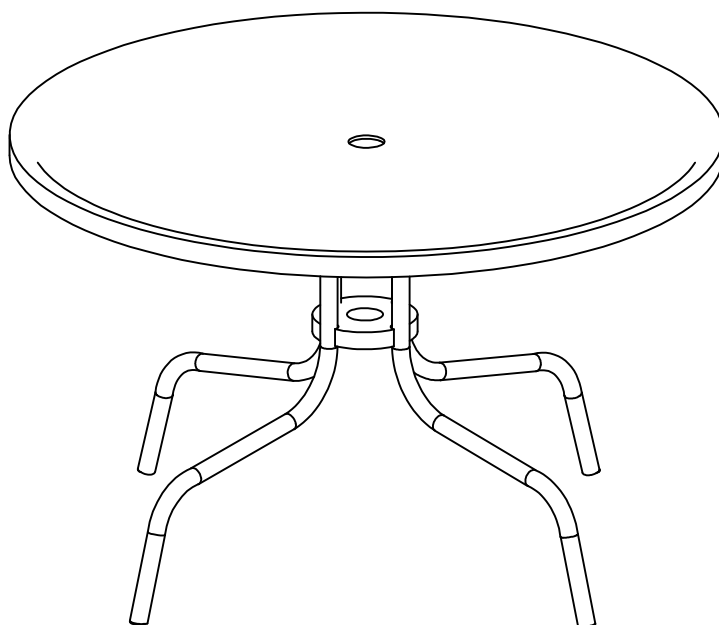

C R O S L E Y




F U R N I T U R E

Congratulations! You have purchased a stylish piece of Crosley Furniture. We strived to provide fine furniture products, built with quality materials and hand finished details. Please carefully follow the assembly instructions to ensure your furniture is assembled correctly to provide long lasting enjoyment.





Should you experience any missing or damaged parts, **do not return to the store.** please contact us directly at 800-815-4796.

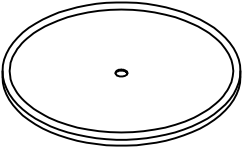Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

PART LIST

A		B		C			
Top 1 PC		Leg 4 PCS		Leg Coupler 2 PCS			


HARDWARE LIST

1	2	3	4	
				
Allen Bolt 8 PCS	Flat Washer 8 PCS	Square Nut 8 PCS	Allen Wrench 1 PC	


STEP 1

Insert Square Nuts (Part #3) into position in both of the Leg Couplers (C).


Note - Be sure that the square nuts are completely inserted to the bottom of leg coupler.

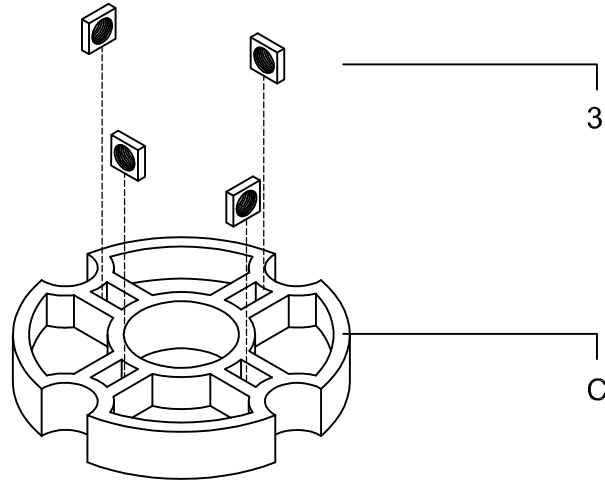


STEP 2 - Attach the Leg Coupler (C) to two of the Legs (B) using Allen Bolts (Part #1) & Flat Washers (Part #2) as shown.

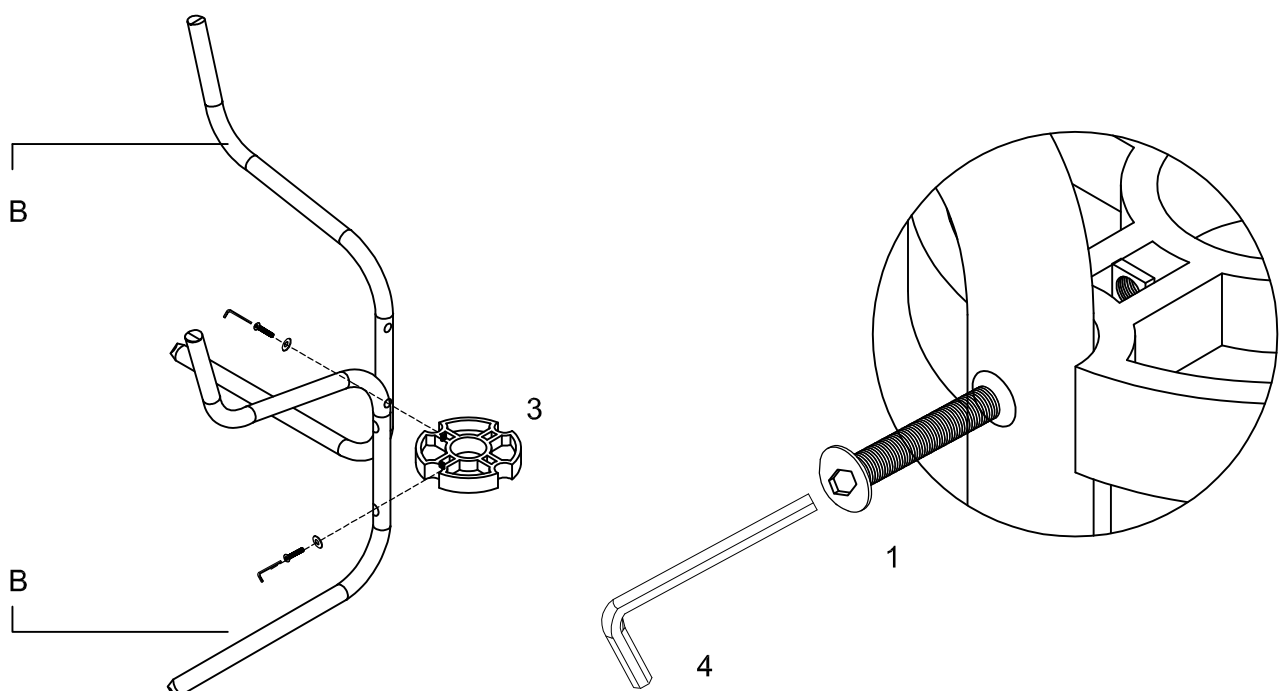


STEP 3 - Lay the Top (A) on a flat surface with the bottom lip facing up. Fit the flat ends of the legs under the lip of Top (A) aligning the hole of the Leg Coupler (C) with the hole in Top (A).

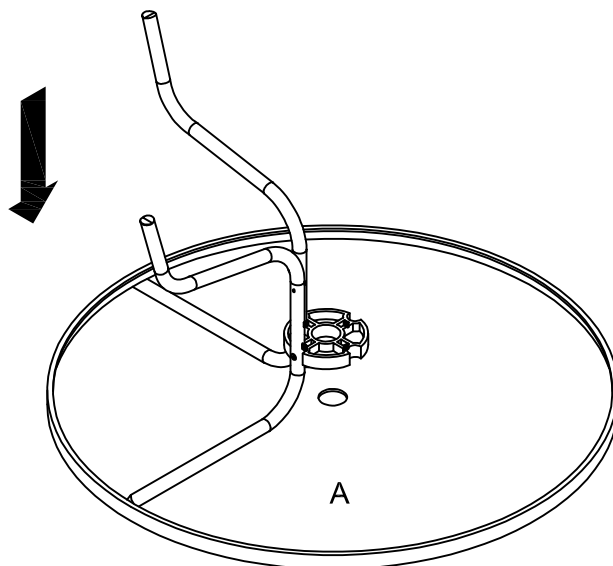


STEP 4 - Add a third Leg (B) fitting the flat end under the lip of Top (A) and attach using an Allen Bolt (Part #1) and Flat Washer (Part #2) as shown.

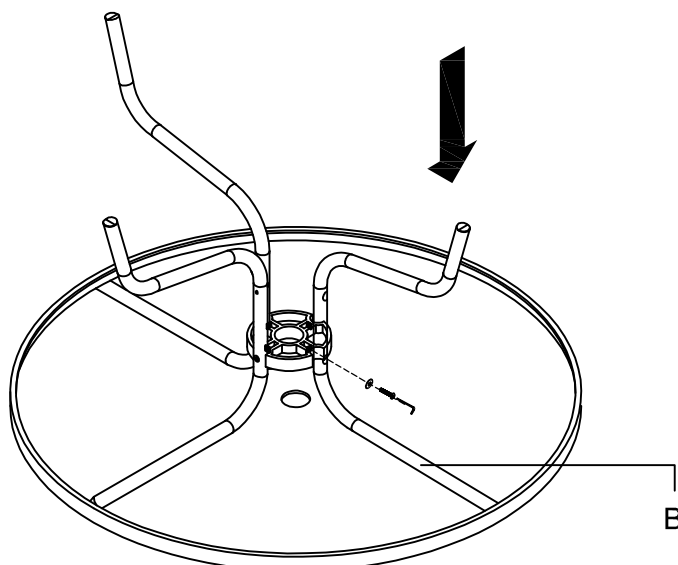


STEP 5 - Attach the second Leg Coupler (C) to the three Legs (B) using Allen Bolts (Part #1) & Flat Washers (Part #2) as shown.

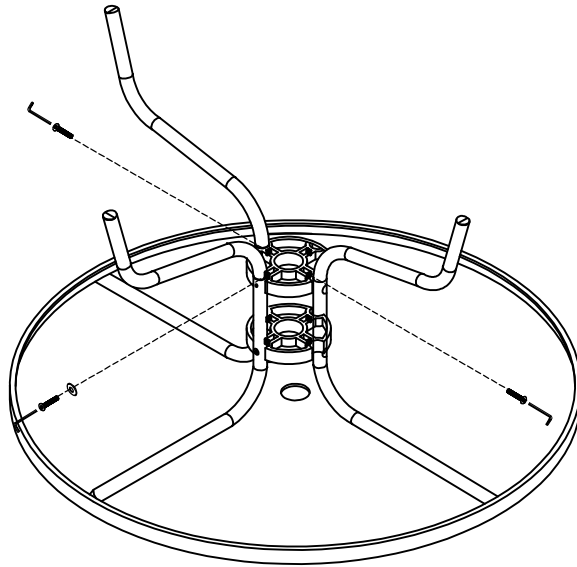


STEP 6 - Add the fourth Leg (B) by fitting the flat end of the leg under the lip of the table and positioning the portion with the bolt holes into the Leg Coupler (C).

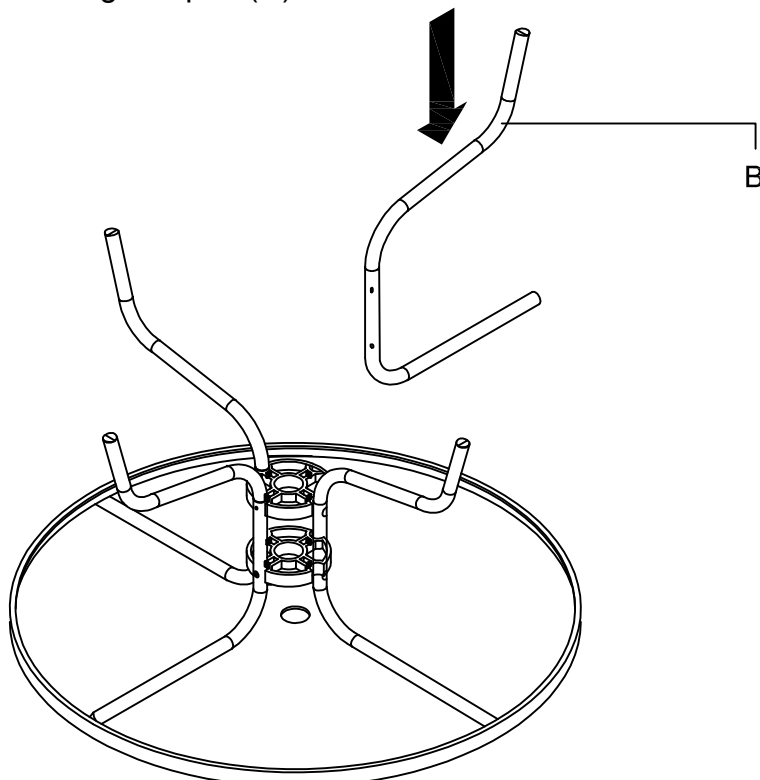

STEP 7 - Attach the fourth Leg (B) to the Leg Coupler (C) using Allen Bolts (Part #1) and Flat Washers (Part #2) as shown. Note - Be sure that the legs are aligned at 90 degree angles before tightening the fourth leg completely.

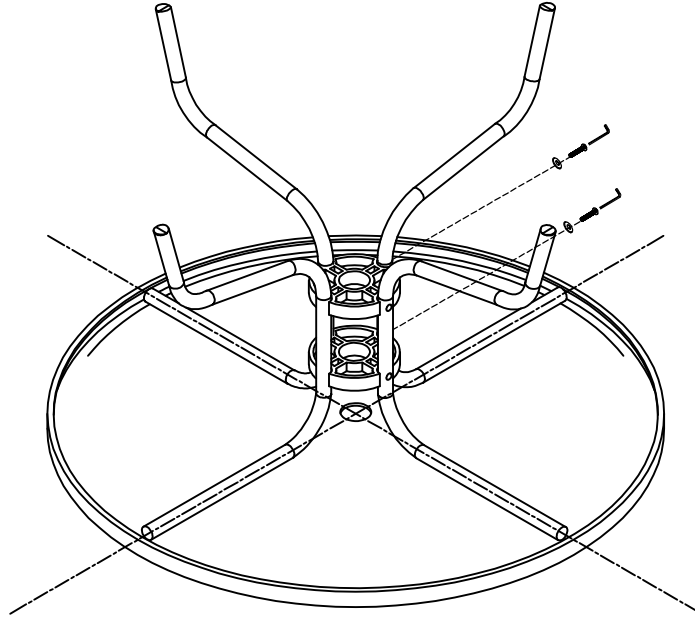

STEP 8 - Turn the table over on a flat surface.
Congratulations! You are finished.

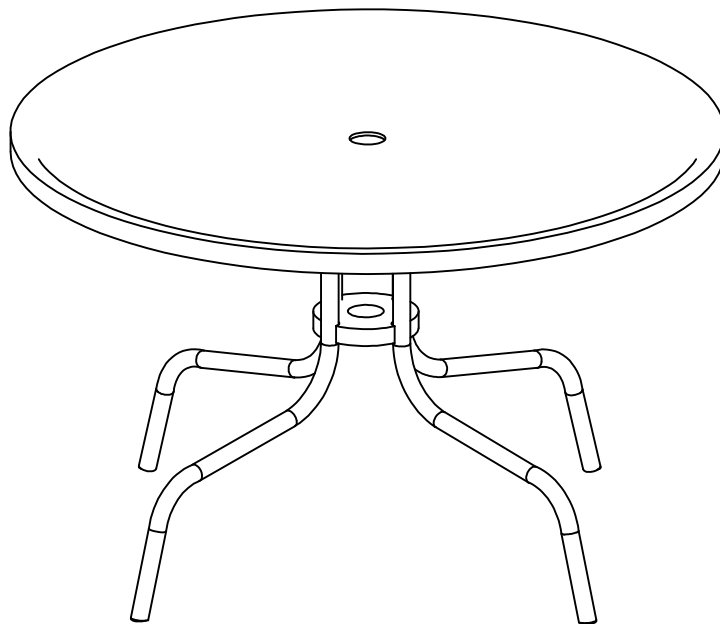

C R O S L E Y

F U R N I T U R E

Limited Manufacturers Warranty

Crosley Furniture Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale. Should any parts be missing or defective, we will replace or repair the parts for a period of 90 days from the date of purchase.

Should you experience any missing or damaged parts, do not return to the store. Please contact us directly at 800-815-4796 from 9 AM to 5 PM (EST) Monday to Friday.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Furniture's high standards of Quality and Workmanship.