


# Breathe- *Easy*®


## Step 1.

Peel away paper backing & use the end tabs to position evenly on the plate.

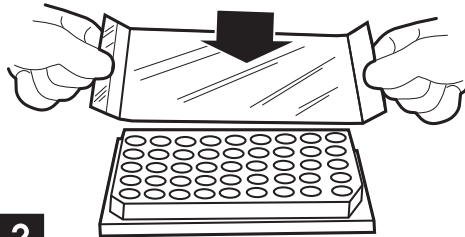

## Step 2.

Using a rubber brayer, roll in several directions to ensure uniform adhesion to the plate.

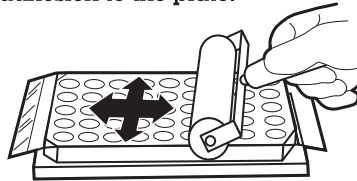

## Step 3.

The top protective layer can be easily separated by peeling the extended clear end tab at the corner and then holding the bottom layer with your other hand and peel towards the center of the film.

